


remote control to select USB source. The word "**USB**" will be shown on the display.

Press ALBUM+/ALBUM- button to select next / previous album, and play first track. Other playback features are the same as if you were playing a CD.

The player supports the USB music file format of MP3 only. If the unit shows "NO SONG" on the display, the format of your USB device might not be compatible with the HiFi. The unit can accept USB devices with up to 32GB of memory.

 
Bluetooth Operation.

Pairing the unit with a bluetooth device to listen to music:

1. press the  button on the HiFi or remote control or directly press the **BT/UNPAIR** button on the remote control to select BT mode.
2. Activate your bluetooth device and select the search mode. "UX-D327B" will appear on your bluetooth device list.
3. Select "UX-D327B" and enter 0000 for the password if necessary. If connection is successful, the HiFi will make a beep sound twice.
4. To disconnect the bluetooth function. Switch to another source on the HiFi or disable the bluetooth function on your Bluetooth device. The HiFi will make a beep sound.



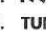
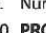
 
 
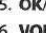
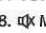
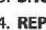

Press and hold BT/UNPAIR button on the remote control. The HiFi will make a beep sound twice. Bluetooth functions operate within a 10 metre distance.

 
JVC HiFi Operating Instructions

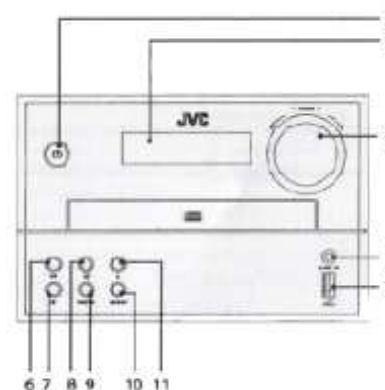


1.  Standby Button
2. Display
3.  VOLUME +/- Dial
4.  LINE IN (AUX IN) Socket
5.  USB Socket
6.  Play/Pause Button
7.  Stop Button
8.  Menu Button
9.  Fast Rewind Button
10.  Fast Forward Button
11.  Open/Close Button


Remote Control

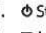1.  Standby Button
2.  / AUTO Button
3.  ALBUM +/- Button
4.  Fast Rewind Button
5.  TUNE- Button
6.  EQ Button
7.  CD Button
8.  USB/LINE IN Button
9. Number Pad
10.  PROG/PRESET Button
11.  INTRO Button
12.  Open/Close Button
13.  VOL+ Button
14.  Play/Pause Button
15.  OK Button
16.  VOL- Button
17.  TUNE+ Button
18.  Mute Button
19.  Menu Button
20.  BT/UNPAIR Button
21.  DAB/FM Button
22.  SLEEP/CLOCK Button
23.  SHUFFLE/INFO Button
24.  REPEAT/MENU Button

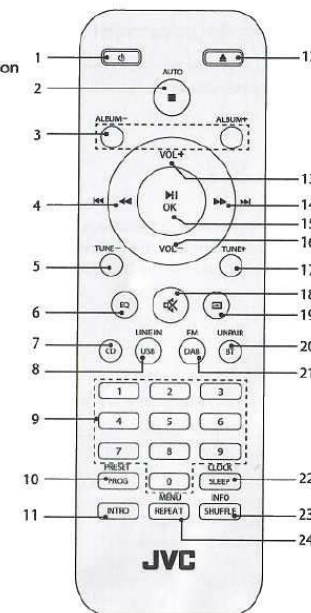

Basic Operation

Press  on the HiFi or remote control to switch on the HiFi unit. The display will show "**HELLO**" and the standby indicator will switch off. Then the system will switch to the last selected source.

Press  on the HiFi or remote control to switch the unit back to standby mode. The display will show "**GOODBYE**" and the standby indicator will light up red. The clock will be displayed.

Selecting Modes

Press the **Source** button on the HiFi or remote control to switch between DAB,FM,LINE IN,BT(Bluetooth),Disc or USB mode. The selected mode will show on the display. Alternatively you can directly press the following buttons on the remote control to switch to your desired mode.

BT/UNPAIR to switch to BT Mode

CD to switch to Disc Mode

DAB/FM to switch to DAB/FM radio mode.

Adjust the speaker level settings and effects

To increase or decrease the volume, turn the **Volume +/-** dial on the HiFi or press the **VOL+/-** button on the remote control. **Mute Sound**

If you wish to turn the sound off press **Mute** button. Press **Mute** again, or turn the **Volume+/-** dial on the HiFi unit or press **VOL+/-** button to resume normal listening.

Preset Equalizer

You can adjust the sound reproduced by simply choosing from 5 preset equalizers. During play, press the **EQ** button on the remote control repeatedly to select **FLAT /JAZZ /CLASSIC /ROCK /POP**.

Fm Radio Operation

Press the **source** button **Source** repeatedly on the HiFi or press the **FM** button on the remote control to select the FM source. The word "**FM**" will be shown on the display.

Tuning in a station - Auto Tuning

Press **Auto** button on the remote control to start auto tuning. Press **Auto** button again to stop the auto tuning.

Manual Tuning

Press and hold **Seek** or **Seek** on the HiFi unit or

TUNE+ or **TUNE-** on the remote control to start the forward or reverse scanning. The display will show the frequency being searched. Once a station has been found the scanning will stop automatically. Continue to change the frequency until you find the station you want.

CD

Press **Source** Button on the HiFi or remote control repeatedly or press CD button on the remote control to select the DISC as Source. The word "DISC" will be shown on the display.

Playback

In DISC mode press **Play** button on the HiFi or remote control to open the disc tray.

Place the CD with the label side up into the CD tray and press the **Play** Button on the HiFi or remote control to close the tray.

If there is no CVD or the CD is damaged "NO DISC" will be displayed. If in stop mode press the **Play** to start playing the CD.


To Skip search or search and play

Press **Previous** once or more to skip to the beginning of the current track or the previous track.

Press **Next** once or more to skip forward to the next track.

Press and hold **Previous/Next** to search for the position that you intend to start playing. Release for normal playback.

Using the USB

Insert the USB stick into the  socket at the front of the HiFi. Press the **Source** Button on the HiFi or remote control or press **USB/LINE IN** on the

